



Bubble Extractor

SEMI-AUTOMATIC WASHING MACHINE

5kg

*FOR MEDICINAL AND CULINARY
HERBS ICE EXTRACTS*

The Bubblextractor washing machine produces better quality Bubble, in less time and with less mess than ever before!



WARNING

Danger - very heavy product
Use two or more people to move and install the washer. Failure to follow this recommendation may result in a back injury or other injury.

Its gentle agitation results in a top quality extract every time - a huge improvement over hand mixing.

The 5 gallon machine is a countertop model, suitable for use with our 5 gallon bubble bags. Simply add ice, water, and plant material to produce the world's finest herbal extract in minutes.

1.-Place plant material in the Bubblextractor bag. Add enough ice to fill the bag, then place the bag into your Bubble Now Machine.

2.-Fill your Bubblextractor machine with very cold water and ice up to the line marked "MAX" on the unit.

3.-Turn on your Bubblextractor machine. You can adjust the time to your desired setting. We recommend a maximum of 15 minutes.

4.-Line the bucket with your Bags starting with the 25 micron bag, and ending with the 220 micron bag.

5.-When the Bubblextractor has finished mixing there is no need to wait for settling to occur. Using the drain hose, drain the water into your 25 to 220 micron bags.

6.-Gently squeeze and remaining water out of the Bubblextractor bag. Rinse down the inside of the Bubblextractor machine to make sure no plant extracts are stuck to the inside. Drain the rinse water into your 25 to 220 micron bags.

7.-Now you are ready to begin collection of your herbal extract. Pull out the 220 micron bag and allow the water to drain into the remaining bags. Discard the contents of this bag as the 220 micron bag is used only to catch contaminants.

8.-The remaining bags contain various of herbal extract. Pull out each Bubble Bag, one by one, draining them back into the bucket.

9.-To remove your herbal extract turn each bag inside out and stretch it over a bowl, then scrape off the herbal extract with a spoon or plastic card.

10.-Place your extract onto the pressing screen. Fold a clean, dry tea towel in half with the pressing screen in the middle.

Gently press out the moisture.

INTRODUCTION

 
This washing machine is one of the newest types of our company. It has following features:

- 1 .Better current design.When the wheel is running,the current sets up a special cycle watercourse and raises immediately.Then it will spray out strongly.At the same time, it shapes a strong current and washes the clothes from different direction.
2. Employing a new type big wavy wheel and a small wavy wheel making the clothes cleaner.
3. Various washing choices:soft,standard.

ATTENTION

- **Don't set it in bathroom or the place where rain come in easily and it is wet.**
- **Well connected to the ground.**
- **Using single socket and forbidden to use multiplid socket together with other electric.**
- **Choose the correct power,otherwise it may cause fire or electricity strike.**
- **Away from fire sparks to avoid the plastic deform.**
- **All the components inside the machine must not touch water during the maintenance period.**
- **Don't put the heavies or hot things on the machine to avoid the plastic parts deform.**

MAINPARTS

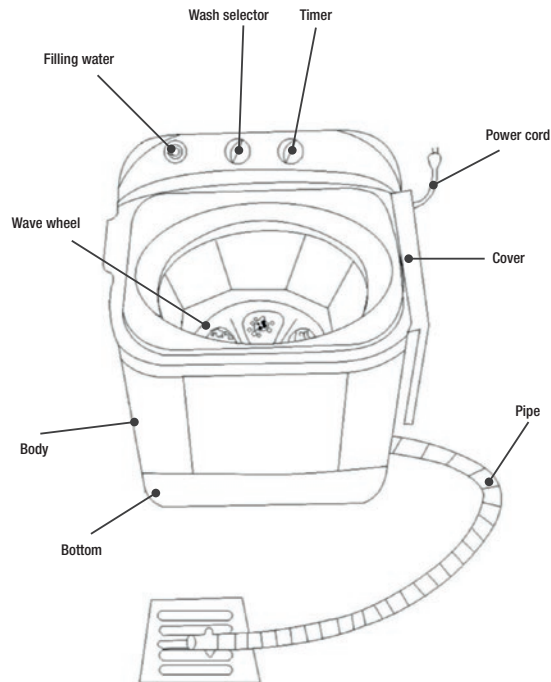


Please clean the plug if it is dust ed or stuck with dirty things in order to avoid causing fire.
 You are forbidden to use hot water above 55°C in the tub. Otherwise, the plastic parts deform.
 Don't touch the washing clothes with your hand before the machine completely stops.
 Don't use the plug when it is in disrepair, otherwise it may cause fire or electricity strike.

Must not put clothes in which are just cleaned with organic vaporizing solvents, such as gas, alcohol.

When pulling the plug out, you should not pull the wire in order to avoid the possibility of electric strike or causing fire.

Must pull out the plug when you are away from home for a long time or you are repairing the machine.
 Also, please don't pull out the plug by wet hand to avoid the electric.

 CIRCUIT DIAGRAM

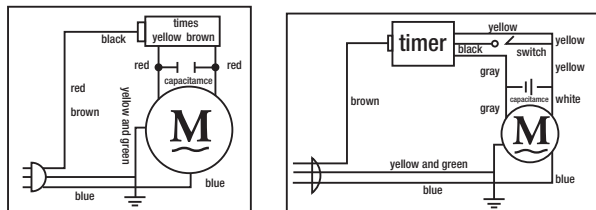

INSTRUCTIONS FOR OPERATION

WASHING ORDERS:

1. The socket must be grounded.
2. Lay down the discharging tube to assure good discharging.
3. Insert the plug into the socket.
4. Connect the water introducing tube :insert the introducing water elbow into the water gate on the washing machine until you hear the click.

⇒ WASHING

⇒1. washing



⇒2. half-way drain



⇒3. cleaning



⇒ WASHING

1. Discharging water completely.
2. Pull the plug out of the socket.
3. Take out the de-hair device inside the machine and clean it.
4. Open the lid and dry the tub in the air.

3. AGENT USED FOR WOOLEN SWEATER

Washing amount	Water level (volume)	Normal	
		Condensed One	Normal One
3.0 kg	High (24L)	6 ml	17 ml
2.0 - 2.5 kg	Middle (18L)	5 ml	14 ml
2.0 kg	Low (10L)	4,5 ml	12 ml

1. Correctly select the volume of agent, please refer to the list.
2. Method: please use it according to the method of washing soft articles.
3. When wash the fine woolen fabric, please select the special agent.

WASHING POWDER

Directly dissolve the washing powder.

1. Put in washing powder when the water level is low.
2. Turn the switch to the position of standard.
3. Start the machine and stir the water for 1 min.
4. After the washing powder dissolves, put in washings and introduce water to expected level.
5. Select correct washing time.

WASHING METHOD FOR WOOLEN FABRIC

For fine woolen fabric, such as the purely made of rabbit long hairs and wool, don't wash them directly in the tub.

1. Select water level for introducing water: put warm water of 30°C and select proper water level.
2. Putting in washing agent: please refer to washing agent for woolen fabric. In order not to damage the fabric of pure animal hairs, please use neutral washing agent without ferment.
3. Putting in washings: woolen washings should be put into the net and washed on their reverse sides.
4. Washing: wash them with weak water flow for 2 mins then introduce water to rinse them for 2 mins. Take them out, flatten them and keep them in good shape. Don't dry them in the sun but in cloudy days.

Washing capacity	Water level	Water flow
Below 2.0 kg	Middle	Soft
Below 1.0 kg	Low	

METHOD FOR WOOLEN BLANKET

Washing pure woolen blanket and electric blanket are absolutely forbidden.

1. Fold the blanket four times in upright direction, then roll it up and put it into the net bag.
2. Put the blanket into the washing tub and press it lightly with hand so as to make it full of water and sink down to the water bottom.
3. According to the weight and volume of the blanket, adjust the water level.
4. Select washing time and start washing. Sometimes the washings would make water inside the tube spilling out. It is better to cover the tub with the lid.

WASHING

1. Filling water. Adjust to the expected water level with the handle of water level adjuster.
2. Putting in washing powder and selecting washing time. For the detailed information, please refer to the guide for customers.
3. Utting in washing clothes :The clothes put into the tub would decrease the water level. Add more water if necessary.
4. Selecting water flow: Select corresponding water flow. As for the details, please refer to the guide for customers.
5. After the wash ing ends,discharge water.

Attention

1. If there has amount of water in the tub,it would spill out of the tub.
2. In order to prevent damage or deformings of washings, better to tie up some long washings, such as skirts or pull up all zippers.
3. Pretreat ing method just as the figure shown.
4. All pockets should be empty. If not, take coins, nail etc out of them.
5. Hairy balls, collars should be turned inside.
6. Fast color washings should be washed separately.

GUIDE FOR CUSTOMERS

1. THE STANDARD OF THE WASHING TIME

Washing capacity	Water level	Water flow	Washings	Washing time
2.2 kg	Standard	Middle (18L) High (22L)	Chemical fiber	4-6 min
			Kapok, hemp	5-8 min
			Very dirty washings	6-10 min
			Bed sheets	8-10 min
2.0 kg	Soft	Middle (15L) High (20L)	Thin chemical fiber	3-4 min
			Chemical fiber	4-6 min
			Kapok, hemp	9-15 min

2. NORMAL AGENT AMOUNT USER FOR WASHING

Washing capacity	Water level	Normal	
		Condensed One	Normal One
3.0 kg	High (24L)	21 g	34
2.0 - 2.5 kg	Middle (18L)	18 g	28
2.0 kg	Low (10L)	15 g	24

Different class of washing, diferent selection of correspondind washing agent.
Please don't use excessive amount of washing agent. It would cause wast and affect.

MAINTENANCE

1. Please pull the plug out of the socket(don't touch the socket when your hands are wet) and put it at the correct position .
2. After di scharging the water in the tub,please tum the switch from discharge to standard.
3. Clean the de-hair device:
 - 1) Take out the de-hair set,dismantle it with a finger pressing the inside bottom.
 - 2) Put the de-hair set in water to clean.
 - 3) After cleaning ,restore the de-hair device, insert it into the slot under the water level side board.A click should be heard.
4. Pick up the water introducing tube and hang the discharging tube.
5. Clean the housing of the machine, wipe it thoroughly, and wipe out the dirt with chemicals, such as alcohol, eradicator, acetone, gas etc. When it is very dirty, please use neutral liquid soap to clean.
6. Close the lid, place the machine at the ventilation in the room.



Water is not allowef to enter the inner part of the machine directly. Otherwise, the electric motor will be conducted by electricity. This is the reason that electric stroke may happen.

PACKING LIST

NO.	Name	Unit	QTY
1	Washing machine	SET	1
2	Introducing water tube	PIECE	1
3	Operating instruction manual	Copy	1