

**Warning:**

This product is not suitable for disabled、 children to use, except under the guidance help and instructions.

Children should be take care, make sure leave the product away.

This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
If the supply cord is damaged, it must replaced by a special cord or assembly available from the manufacturer or its service agent.

Children should be supervised to ensure that they do not play with the appliance.



## **SINGLE TUB WASHING MACHINE OPERATING INSTRUCTION MANUAL**

**MODEL: XPB80**

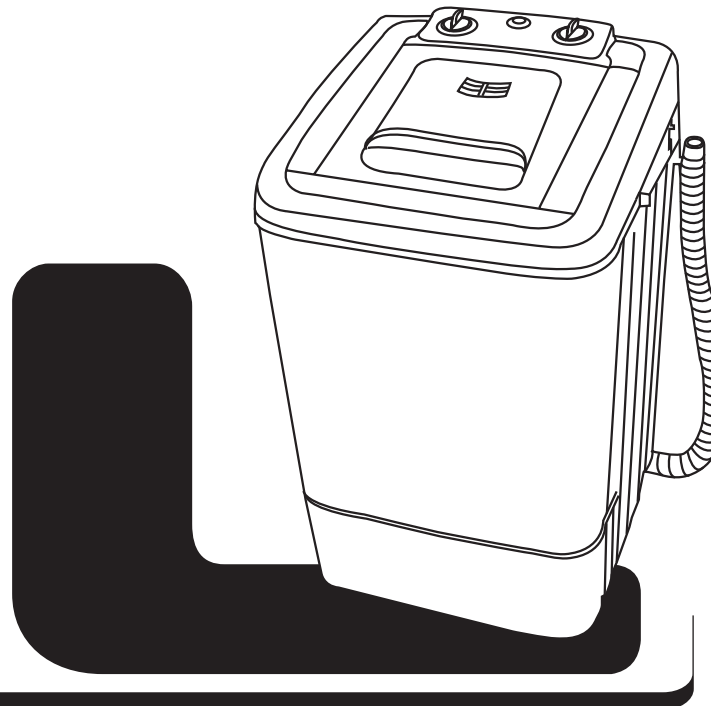


## INTRODUCTION

This washing machine is one of the newest types of our company.

It has following features:

1. Better current design. When the wheel is running, the current is absorbed into the special setup, which is cycle watercourse, and raised immediately, then it will spray out with strongly, in the same time it also shapes the strong current and washes the clothes from different direction.
2. Employing a new type big wavy wheel and the small wavy wheel making the clothes cleaner.
3. Various washing choices: soft, standard.
 
## MAINPARTS

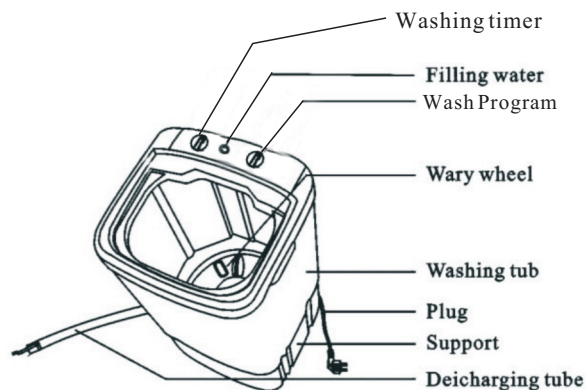

## ATTENTION

- ⊗ Don't set it in bathroom, the place where the rain comes in easily and it is wet.
- Well connected to the ground.
- Using single socket and forbidden to use multiplied socket together with other electric.
- ⊗ Choose the correct power, otherwise it will cause possible fire or electricity strike.
- ⊗ Away from fire sparks to avoid the plastic deform.
- ⊗ All the components inside the machine must not touch water during the maintenance period.
- ⊗ Don't put the heavies or hot things on the machine to avoid the plastic parts deform.

inside the tube spilling out. It is better to cover the tub with the lid.

## MAINTENANCE

1. Please pull the plug out of the socket (don't touch the socket when your hands are wet) and put it at the correct position.
2. After discharging the water in the tub, please move the switch from discharge to standard.
3. Clean the de-hair device:
  - 1) Take out the de-hair set, dismantle it with a finger pressing the inside bottom.
  - 2) Put the de-hair set in water to clean.
  - 3) After cleaning, restore the de-hair device, insert it into the slot under the water level side board. A click should be heard.
4. Pick up the water introducing tube and hang the discharging tube.
5. Clean the housing of the machine, wipe it thoroughly, and wipe out the dirt with chemicals, such as alcohol, eradicant, acetone, gas, etc. When it is very dirty, please use neutral liquid soap to clean.
6. Close the lid, place the machine at the ventilation in the room.

 
⚠ Water is not allowed to enter the inner part of the machine directly. Otherwise, the electric motor will be conducted by electricity. This is the real reason why sometimes that electric stroke may happen.

## PACKING LIST

NO.	Name	Unit	QTY
1	Washing machine	Set	1
2	Introducing water tube	Piece	1
3	Operating instruction manual	Copy	1

- Please clean the plug if it is dusted or stuck with dirty things in order to avoid causing fire.
- ⊗ You are forbidden to use hot water of above 55°C in the tub lest the plastic parts deform.
- ⊗ Don't touch the washing clothes with your hand before the machine completely stops.
- ⊗ Don't use the plug when it is in disrepair, otherwise it will cause the fire or electricity strike.
- ⊗ Must not put clothes in which are just cleaned with organic vaporizing solvents, such as gas, alcohol.
- When pulling the plug out, you should not pull the wire in order to avoid the possibility of electric strike or causing fire.
- Must pull out the plug when you are away from home for a long time or you are repairing the machine, other way, please don't pull out the plug by the wet hand to avoid the electric stroke.

## CIRCUIT DIAGRAM

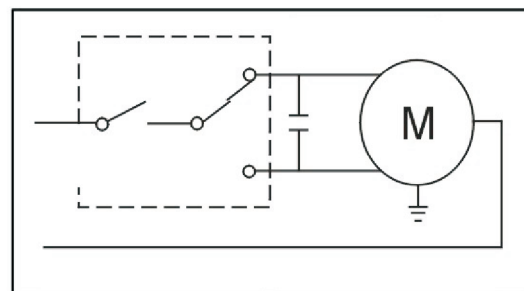

## INSTRUCTIONS FOR OPERATION

### WASHING ORDERS:

1. The socket must be grounded.
2. Lay down the discharging tube to assure good discharging.
3. Insert the plug into the socket.
4. Connect the water introducing tube: insert the introducing water elbow into the water gate on the washing machine until you hear the click.

### ⇒ Washing

#### ⇒ 1. washing



#### ⇒ 2. half-way drain



#### ⇒ 3. cleaning



### ⇒ Washing

1. discharging water completely.

2. Pull the plug out of the socket.
3. Take out the de-hair device inside the machine and clean it.
4. Open the lid and tub dry in the air.

## WASHING ORDERS:

### WASHING.

1. Filling water  
Adjust to the expected water level with the handle of water level adjuster.
2. putting in washing powder: Selecting washing time. For the detailed information, please refer to the guide for customers.
3. Putting in washing clothes: The clothes put into the tub would decrease the water level and add more water in time if necessary.
4. Selecting water flow: Select corresponding water flow. As for the details, please refer to the guide for customers.
5. After the washing ends, discharging water.

### Attention

1. If there has amount of water in the tub, it would spill out of the tub.
2. In order to prevent damage or deforming of washings, better to tie up some long washings, such as skirts or pull up all zippers.
3. Pretreating method just as the figure shown.
4. All pockets should be empty. If not, take coins, nail etc out of them.
5. Hairy balls, collars should be turned inside.
6. Fast color washings should be washed separately.



## GUIDE FOR CUSTOMERS

### 1. THE STANDARD OF THE WASHING TIME:

#### Washing time:

Washing Capacity	Water Flow	Washings	Washing Time
Above 2.4kg	Middle(40L) High(48L)	Chemical fiber	4-6min
		Kapok, hemp	8-11min
		Very dirty washings	12-15min
		Bed sheets	9-13min
Below 2.4kg	Middle(40L) Low(36L)	Thin chemical fiber	3-4min
		Chemical fiber	4-6min
		Kapok, hemp	9-11min

### 2. NORMAL AGENT AMOUNT USED FOR WASHING

Washing Capacity	Water Level	Normal	
		Condensed One	Normal One
Above 3.6kg	High(48L)	36g	57g
3.6kg-2.0kg	Middle(40L)	30g	48g
Below 2.0kg	Low(36L)	25g	40g

Different class of washing, different selection of corresponding washing agent.  
Please don't use excessive amount of washing agent. It would cause waste and affect

washing effect.

### 3. AGENT USED FOR WOOLEN SWEATER.

Washing amount	Water Level (volume)	Normal amount	
		Condensed	Normal
Above 3.6kg	High(48L)	10ml	29ml
3.6kg-2.0kg	Middle(40L)	8ml	24ml
Below 2.0kg	Low(36L)	7ml	20ml

1. Correctly select the volume of agent, Please refer to the list.
2. Method: please use it according to the method of washing soft articles.
3. When wash the fine woolen fabric, please select the special agent.

### WASHING POWDER

Directly dissolving the washing powder.

1. Put in washing powder when the water level is low.
2. Turn the switch to the position of standard.
3. Start the machine and stir the water for 1 min.
4. After the washing powder dissolves, put in washings and introduce water to expected level.
5. Select correct washing time.

## WASHING METHOD FOR WOOLEN FABRIC

For fine woolen fabric, the purely made of rabbit long hairs and wool.

Don't wash them directly in the tub.

1. Select water level for introducing water: put warm water of 30°C and select proper water level.
2. Putting in washing agent: for the washing agent, please refer to washing agent for woolen fabric. In order not to damage the fabric of pure animal hairs. Please use neutral washing agent without ferment.
3. Putting in washings: woolen washings should be put into the net and washed on their reverse sides.
4. Washing: wash them with weak water flow for 2min then introduce water to rinse them for 2min, take them out, flatten them and keep them in good shape. Don't dry them in the sun but dry them in cloudy days.

Washing Capacity	Water level	Water flow
Below 2.0kg	Middle	Soft
Below 1.0kg	Low	



## METHOD FOR WOOLEN BLANKET

Washing pure woolen blanket and electric blanket are absolutely forbidden.

1. Fold the blanket four times in upright direction, then roll it up and put it into the net bag.
2. Put the blanket into the washing tub and press it lightly with hand so as to make it full of water and sink down to the water bottom.
3. According to the weight and volume of the blanket, adjust the water level.
4. Select washing time and start washing. Sometimes the washings. Would make water