

## PLEASE READ INTRUCTIONS BEFORE INSTALLATION

**Warning:** Keep your reflector away from combustible materials. Ensure your reflector is mounted securely and keep lamp cords away from direct heat from the lamp and reflector. Light hangers or small chains are good options to use for hanging the reflector.

### Changing Lamps:

Let the reflector cool down and disconnect the power from the ballast when replacing or changing out lamps. Use gloves to keep the lamp glass clean from dirt and oils.

## TO REMOVE A LAMP

- Disconnect the power from the ballast
- Open the lamp holders by sliding them outwards, the lamp will be held in place by a metal spring, however secure the lamp to prevent it from falling out
- Remove lamp




## TO INSTALL A NEW LAMP

- Make sure power is disconnected from the ballast
- Confirm the lamp is clean, wear cotton gloves if possible
- Confirm the end wires are straight
- Open lamp holders by sliding them outwards
- Install the lamp by gently pressing the lamp until the metal springs hold the lamp
- Close the lamp holders by sliding them inward
- Wipe the lamp with clean soft cloth

***\*Do not touch the reflective material with your bare hands***

For more information please visit our **website:** [www.ocl-lighting.com](http://www.ocl-lighting.com)

**Email:** [info@ocl-lighting.com](mailto:info@ocl-lighting.com)

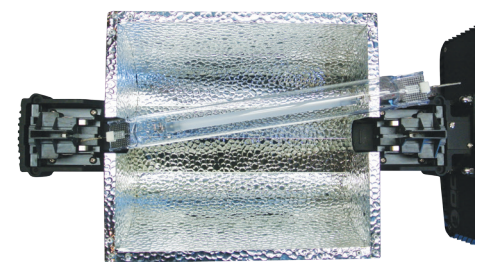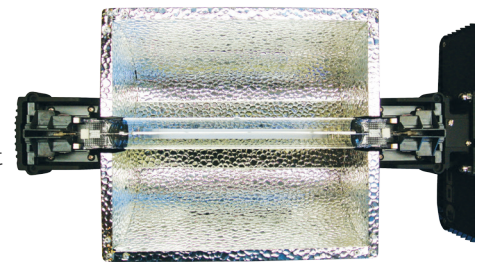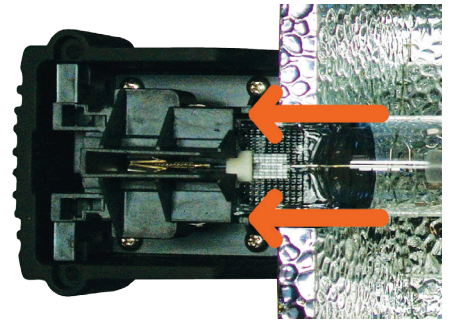

## OCL REPLACEMENT OF THE REFLECTOR

### REPLACEMENT OF THE REFLECTOR

**Note:** OCL recommends replacing the reflector after 5000 lighting hours. Depending on the environment and contamination levels the reflector will degrade.

The vega/Miro™ aluminum can not be cleaned without damage. Therefore we recommend to change the reflector once every year. Also replace the lamp when replacing the reflector.

- Switch off mains power.
- Remove the lamp from the fixture.
- Support the reflector on the side of the reflector lever to prevent it from falling.
- Move the pin to the left.
- Remove the reflector.
- Place the new reflector. Ensure the reflector lever is in the opened position to allow the reflector to pass.
- Ensure the holes in the reflector are aligned with the pins in the fixture.
- Release the reflector lever so its two pins hold the reflector in place.
- Insert the lamp in the lamp holder.
- Switch on mains power.

